LG

CE 0168

LG-A140 Benutzerhandbuch -DEUTSCH-

Der Inhalt dieses Handbuchs kann je nach Modell oder Software des Mobiltelefons oder nach Dienstanbieter variieren.

Entsorgung Ihres Altgeräts

1 Wenn dieses Symbol eines durchgestrichenen Abfalleimers auf einem Produkt angebracht ist, unterliegt dieses Produkt der europäischen Richtlinie 2002/96/EC.

2 Alle Elektro- und Elektronik-Altgeräte müssen getrennt vom Hausmüll in staatlichen oder kommunalen Sammeleinrichtungen und entsprechend den geltenden Vorschriften entsorgt werden.

3 Durch eine vorschriftsmäßige Entsorgung von Altgeräten können schädliche Auswirkungen auf Mensch und Umwelt vermieden werden.

4 Genauere Informationen zur Entsorgung von Altgeräten erhalten Sie bei den lokalen Behörden, der Entsorgungseinrichtung oder dem Fachhändler, bei dem Sie das Produkt erworben haben.

P/N: MFL67001003 (1.0)

Ihr neues Mobiltelefon

Aufrufen von Menüfunktionen und Optionen

Das Telefon bietet verschiedene Funktionen, mit deren Hilfe Sie das Gerät an Ihre Erfordernisse anpassen können. Diese Funktionen sind in Menüs und Untermenüs eingeteilt, auf die Sie über die OK-Taste und die beiden Auswahltasten zugreifen können. Über diese Menüs bzw. Untermenüs können Sie die jeweiligen Funktionen anzeigen und verwenden.

Die Auswahltasten haben je nach Kontext unterschiedliche Funktionen, die im Display als Text direkt über den Tasten angezeigt werden.

Standby-Bildschirm: Kurzer Tastendruck, um sofort das Hauptmenü aufzurufen.

Nach-oben-Taste: Vorherige Auswahl/ Wert erhöhen/nach oben.

Nach-unten-Taste: Nächste Auswahl/ Wert verringern/nach unten.

Nach-links-Taste: Vorherige Eingabe/ nach links.

Nach-rechts-Taste: Nächste Eingabe/ nach rechts.

Während eines Anrufs: Lautstärke erhöhen/verringern.

Einsetzen der SIM-Karte und Aufladen des Akkus

Einsetzen der SIM-Karte

Wenn Sie sich bei einem Mobilfunkanbieter anmelden, erhalten Sie eine Plug-in-SIM-Karte, auf der Ihre Teilnehmerdaten wie Ihre PIN und verfügbare optionale Dienste gespeichert sind.

Wichtig! Die Plug-in-SIM-Karte und ihre Kontakte können durch Kratzer oder Biegen leicht beschädigt werden. Gehen Sie daher beim Einsetzen und Entfernen der Karte vorsichtig vor. Bewahren Sie alle SIM-Karten außerhalb der Reichweite von Kleinkindern auf.

Abbildungen

1 Akkuabdeckung öffnen
2 Akku entnehmen
3 SIM einsetzen
4 Akku einsetzen
5 Akkuabdeckung schließen
6 Akku aufladen

WARNUNG: Entfernen Sie den Akku nicht, während das Telefon eingeschaltet ist. Dies könnte Schäden am Telefon zur Folge haben.

Verwenden des Telefons

Einschalten

Halten Sie zum Einschalten Ihres Telefons die -Taste gedrückt. Darauf erfolgt eine Kurzanzeige auf dem Display. Ist der Zugriff auf die SIM-Karte geschützt, wird auf dem Display die Aufforderung zur Eingabe des PIN-Codes angezeigt. Dabei handelt es sich um den vierstelligen Code, den Sie zusammen mit Ihrer SIM-Karte erhalten haben. Aus Sicherheitsgründen wird der Code nicht auf dem Display angezeigt.

WARNUNG: Wenn dreimal in Folge ein falscher PIN-Code eingegeben wird, führt dies zur Sperrung der SIM-Karte. So haben Sie die Sperre auf:
- Geben Sie den von Ihrem Netzbetreiber bereitgestellten PUK-Code (Personal Unblocking Key) ein und bestätigen Sie ihn.
- Geben Sie den neuen PIN-Code ein und bestätigen Sie ihn.
- Geben Sie Ihren neuen PIN-Code erneut ein und bestätigen Sie ihn.

Nach 5 oder 10 fehlerhaften Versuchen (je nach Art der SIM-Karte) wird die SIM-Karte endgültig gesperrt. Wenden Sie sich in diesem Fall zur Anforderung einer neuen Karte an Ihren Netzbetreiber.

Sobald der Netzwerkname auf dem Display erscheint, können Sie das Telefon für Anrufe benutzen.

Sprachanruf tätigen

Wählen Sie die Nummer und drücken Sie die -Taste.

Während des Wahlvorgangs wird u. U. durch entsprechende Töne die Herstellung der Verbindung angezeigt. Sobald die Verbindung hergestellt wurde, drücken Sie zur Einstellung der Lautstärke die Nach-oben- bzw. Nach-unten-Taste. Um bei Gesprächsende den Anruf zu beenden, drücken Sie die -Taste.

Internationaler Anruf

Drücken Sie etwas länger auf die -Taste, bis das „+"-Zeichen angezeigt wird, und geben Sie – ohne den Wählton abzuwarten – die Landesvorwahl, Ortsvorwahl und Teilnehmernummer ein.

Notruf

Zur Kontaktaufnahme mit internationalen Notdiensten wählen Sie die **112** und drücken danach die -Taste. Je nach Netzbetreiber ist der Zugriff auf Notdienste ggf. auch ohne SIM-Karte und bei gesperrter Tastatur möglich.

Anrufliste

Über dieses Menü können Sie auf die Liste der zuletzt verwendeten Nummern zugreifen. Innerhalb des Anruflistenmenüs haben Sie Zugriff auf das in vier Listen unterteilte Anrufprotokoll. Diese Listen können Sie jeweils mithilfe der Navigationstasten anzeigen: Alle Anrufe, Verpasste Anrufe, Gewählte Anrufe, Empfangene Anrufe sowie Anrufverwaltung. Im Zusammenhang mit jedem Anruf stehen Informationen zu Art, Datum, Uhrzeit und Dauer des Anrufs zur Verfügung. Nach der Auswahl und Bestätigung eines aufgelisteten Anrufs können Sie unter verschiedenen Optionen auswählen. Sie können ebenfalls eine bestimmte Nummer anrufen, indem Sie die -Taste drücken. Schnellzugriff auf die Anrufliste im Standby-Bildschirm: Drücken Sie die -Taste.

Freisprechmodus
So wechseln Sie während eines Anrufs in den Freisprechmodus:
Drücken Sie kurz die -Taste und bestätigen Sie. Oder drücken Sie die linke -Taste, und wählen Sie **Lautsprecher ein**. Drücken Sie danach die -Taste oder die -Taste, um die Verwendung des Lautsprechers zu bestätigen.
WARNUNG: Halten Sie in diesem Modus das Telefon nicht ans Ohr.

Anruf annehmen

Wenn Sie angerufen werden, ertönt eine Melodie (Einstellung erfolgt über das Menü **Einstellungen->Telefon->Audio->Melodie->Anrufe**) und die Nummer des Anrufers wird auf dem Display angezeigt (sofern dieser Dienst von Ihrem Anbieter bereitgestellt wird). Drücken Sie die -Taste oder die linke -Taste, um den Anruf anzunehmen und das Gespräch zu beginnen. Drücken Sie die -Taste, um den Anruf abzulehnen.

Die den ein- und ausgehenden Anrufen entsprechenden Nummern werden in der Liste der letzten Anrufe protokolliert.

Während eines Anrufs können Sie durch Drücken der -Taste auf verschiedene Funktionen zugreifen. Wenn Sie den Ton stumm schalten möchten, drücken Sie [Stumm], um das Mikrofon vorübergehend auszustellen.

Ausschalten

Drücken Sie 5 Sekunden lang die -Taste.

Darauf wird die Ausschaltmeldung des Telefons angezeigt. Das Telefon wird ausgeschaltet.

Nachrichten

Über dieses Menü können Sie eine SMS oder MMS versenden.

Weitere Informationen zu den Kosten erhalten Sie von Ihrem Netzbetreiber.

Nachrichten schreiben

Wählen Sie **Nachrichten -> Verfassen**.

Eingabemodus ändern

Halten Sie zur Deaktivierung des T9-Modus und zum Wechsel in den ABC-Modus die -Taste gedrückt.

Wie auch im T9-Modus können Sie jederzeit zum Modus für Großbuchstaben, Kleinbuchstaben oder zum 123-Modus (Eingabe von Zahlen) wechseln, indem Sie kurz die -Taste drücken.

Sie können zur Eingabe von Zahlen ebenfalls die gewünschte Taste länger gedrückt halten.

Sprache im T9-Modus ändern: Halten Sie die -Taste gedrückt.

Wählen Sie zum Ändern des Modus [**Optionen**]->**Eingabemodus**.

Zur Eingabe von Satzzeichen drücken Sie die -Taste (außer im 123-Modus) oder nutzen den Einfügemodus (Schnellzugriff durch kurzen Druck).

Nachricht speichern

Unmittelbar bei Verlassen des Eingabemodus wird die Nachricht automatisch in den Entwürfen gespeichert und angezeigt, sobald Sie diesen Modus erneut aufrufen. Wählen Sie **Speichern als->Entwurf**, um die Nachricht unter **Entwürfe** zu speichern.

Wenn Sie **Speichern als->Vorlage** wählen, um die Nachricht später als Vorlage zu verwenden, wird sie unter **Vorlagen** gespeichert.

Nachricht senden

Drücken Sie nach Eingabe des Textes die Navigationstaste, oder wählen Sie [**Optionen**]->**Senden an**. Geben Sie die Nummer des Empfängers ein, oder wählen Sie [**Optionen**]->**Telefonbuch**, um den Empfänger aus einer Kontaktliste in Ihrem Telefonbuch auszuwählen.

Nachrichten empfangen

Wenn Sie eine Nachricht erhalten, ertönt eine Melodie und auf dem Display wird ein Nachrichten-Symbol angezeigt. Wenn das Symbol blinkt, ist der Speicher voll, und es können keine weiteren Nachrichten empfangen werden.

Der Empfang von Multimedia-Nachrichten kann einige Sekunden in Anspruch nehmen. Während des Herunterladens der Nachricht wird ein blinkendes Symbol angezeigt.

Beachten Sie, dass für den Empfang von MMS zwei Möglichkeiten bestehen: automatisch oder manuell. Weitere Informationen zu den Kosten des Empfangs von MMS im Ausland erhalten Sie von Ihrem Netzbetreiber.

Nachrichtenmenü

- **Eingang**: Das Eingangsmenü dient zum Speichern aller empfangenen Nachrichten, und zwar gelesener wie ungelesener Nachrichten. Die Nachrichten werden in chronologischer Reihenfolge, beginnend mit der zuletzt empfangenen, angezeigt.
- **Entwürfe**: Wenn Sie eine verfasste Nachricht speichern, wird sie in den Entwürfen abgelegt.
- **Ausgang**: Unter diesem Menü werden alle noch nicht gesendeten Nachrichten angezeigt. Sie können von hier aus die betreffenden Nachrichten erneut senden.
- **Gesendet**: Dieses Menü dient zur Speicherung aller von Ihnen gesendeten Nachrichten, sofern Sie in den Nachrichteneinstellungen die Option **Ges. Nachr. speich.** aktiviert haben.

Vorlagen

Wenn Sie eine Nachricht verfassen und die Option **Speichern als->Vorlage** ausgewählt haben, wird die Vorlage in diesem Menü gespeichert.

Mailbox anrufen

Mithilfe dieser Funktion können Sie durch längeres Drücken von Ihre Mailbox anrufen.

Hinweis: Die Mailboxrufnummer wird im Menü **Einstellungen->Anrufe -> Mailbox** eingegeben.

Cell Broadcast

Dieses Menü dient zur Aktivierung des Empfangs der durch die SMSCB-Dienste des Netzes versendeten Informationen.

Sie können diese Dienste aktivieren oder deaktivieren (weitere Informationen erhalten Sie von Ihrem Netzbetreiber).

Speicherstatus

Wählen Sie **Optionen->Speicher**.

Hier können Sie sehen, wie viel Speicherplatz zum Speichern von Nachrichten verfügbar ist.

Nachrichteneinstellungen

Wählen Sie **Optionen->Einstellungen**, um folgende Optionen einzurichten:

- **SMS**: Die SMS-Einstellungen umfassen: Ges. Nachr. speich., Empf.-bestätigung, Gültigkeitsdauer, Mitteilungsformat, Nachr.zentrum Nr.
- **MMS**: Die MMS-Einstellungen umfassen:
  Ges. Nachr. speich.: Um ein zu schnelles Füllen des verfügbaren Speicherplatzes zu vermeiden, empfehlen wir, diese Einstellung zu deaktivieren.
  Abrufmodus: Wenn Sie sich in einem Bereich mit schlechter Netzabdeckung befinden, können Sie hier festlegen, wie MMS-Nachrichten heruntergeladen sind. Aus Kostengründen ist es ratsam, während des Roaming-Betriebs den Abrufmodus auf **Manuell** einzustellen.
  Priorität: Auswahl der Prioritätsstufe beim Senden einer Nachricht.
  Empfangsbest.: Zur Anforderung einer Empfangsbestätigung beim Senden einer Nachricht.
  Gültigkeitsdauer: Für diese Zeitdauer versucht der Netzbetreiber, die entsprechende Nachricht weiterzuleiten.
  Erweitert: Dient zur Aktivierung/Deaktivierung von **Empfangsbest., MMS abweisen, Bcc anzeigen, Absender anzeig.** sowie **Maximale Größe.** Wählen Sie **MMS-Server** zur Auswahl eines anderen MMS-Anbieters, oder geben Sie die Parameter eines neuen MMS-Anbieters ein.

Kontakte

Telefonbuch verwenden

Nach dem Aufrufen des Telefonbuchs wird die Kontaktliste, sofern vorhanden, angezeigt (andernfalls siehe **Neuen Kontakt speichern**).

Nach Auswahl eines Kontakts werden der Name, die Nummer und das zugehörige Bild angezeigt.

Drücken Sie die linke -Taste oder die -Taste, um verschiedene Optionen anzuzeigen.

Zur Schnellsuche nach Kontakten geben Sie die jeweiligen Anfangsbuchstaben (bis zu drei) ein.

Neuen Kontakt speichern

Sie können Kontakte auf zwei verschiedene Arten speichern:

1) Durch Auswahl von **Kontakte -> Optionen -> Im Tel. speichern** oder **Neuer SIM-Kontakt**.
2) **Kontakte -> Neuer Kontakt -> Telefon, SIM-Karte** oder **Festes Tel.b.** (In diesem Menü bestehen Beschränkungen für ausgehende Anrufe. Die Verfügbarkeit des Menüs ist abhängig von Ihrer SIM-Karte.).

- Geben Sie danach den Namen ein, und drücken Sie die -Taste.
- Geben Sie die Nummer ein, und drücken Sie die -Taste.
- Drücken Sie zum Speichern auf [Speichern].

Kontakt anrufen

Wählen Sie einen Kontakt aus und drücken Sie die -Taste, um den Anruf zu tätigen. Falls mehrere Nummern unter dem Kontakt gespeichert wurden, wählen Sie vor dem Anruf zunächst die zutreffende Nummer aus.

Wählen Sie einen Kontakt aus, drücken Sie die -Taste, um die entsprechenden Nummern anzuzeigen, und wählen Sie dann [**Optionen**]->**Anrufen**, um den Anruf zu tätigen.

Geben Sie mithilfe des alphanumerischen Tastenfelds des Telefons die ersten Buchstaben des im Telefonbuch zu suchenden Namens ein. Daraufhin werden die Suchergebnisse angezeigt. Wählen Sie den Kontakt aus, den Sie anrufen möchten.

Kontakt senden

Wählen Sie aus dem Menü **Kontakte** die Option **Nachricht senden** oder **Senden/Bluetooth** aus, um die ausgewählten Kontaktinformationen per Nachricht oder Bluetooth zu senden.

Kontakt kopieren/löschen

Wählen Sie aus dem Menü **Kontakte** die Option **In Telefon kopier.,** um den aktuellen Kontakt, mehrere Kontakte oder das gesamte auf der SIM-Karte befindliche Telefonbuch zum Kopieren auszuwählen.

Wählen Sie **Auf SIM kopieren**, um den aktuellen Kontakt auszuwählen und ggf. den zu kopierenden Namen und die Nummer zu ändern.

Wählen Sie **Eintrag löschen**, um den ausgewählten Kontakt, mehrere ausgewählte Kontakte oder das gesamte Telefonbuch zu löschen.

Kontakte exportieren

Über die Option **Exportieren** können Sie die Daten eines oder mehrerer Kontakte in das Verzeichnis **Mein Telefon->Meine Kontakte** kopieren.

Als meine Karte/Visitenkarte einstellen

Die Details eines im Telefonspeicher gespeicherten Kontakts können über die Option **Meine Visitenkarte** oder **Visitenkarte** als Visitenkarte gespeichert werden. Diese kann daraufhin angezeigt, geändert oder per Nachricht oder Bluetooth gesendet werden.

Versandliste

Mit einer Versandliste können Sie Ihre Kontakte in Gruppen einteilen. Wählen Sie dazu die Option **Gruppen** und anschließend die Kontakte, die Sie der Liste hinzufügen möchten. Mithilfe dieser Liste lassen sich Nachrichten einfach an alle Kontakte der Liste (nur Kontakte im Telefonspeicher) senden.

Intelligente Wählfunktion

Ihr Telefon verfügt über eine intelligente Wählfunktion. Durch Drücken bestimmter Tasten auf dem Standby-Bildschirm kann auf verschiedene Menüs zugegriffen werden.

Wenn Sie beispielsweise auf dem Standby-Bildschirm **22** eingeben, können Sie schnell das Menü **Batteriestatus** anzeigen und verwenden.

Unterhaltung

Spiele

Jedes Spiel umfasst einen Anleitungsteil, um Sie mit den Regeln und Abläufen vertraut zu machen. Und wenn Ihnen diese Spiele gefallen haben, können Sie weitere herunterladen.

- **Spiele herunterladen**: Mithilfe der JavaTM-Funktion können Sie über **Spiele -> Spiele** Spiele und Anwendungen auf Ihr Telefon herunterladen.
  Das Herunterladen erfolgt über die Browserfunktion. Beachten Sie, dass dabei zusätzliche Kosten entstehen können.

Anwendungen

In diesem Menü finden Sie Ihre Downloads (Applets). Drücken Sie die -Taste, um die Applets auszuführen.

Mein Telefon

In diesem Menü finden Sie die Verzeichnisse aller im Telefonspeicher gespeicherten, bzw. der heruntergeladenen Multimedia-Objekte (Bilder, Musikdateien usw.).

Kamera

Fotos aufnehmen und speichern

Wählen Sie das Menü **Kamera**.

Die drei Textzeilen am linken Rand des Displays enthalten folgende Informationen:

1 Anzahl der Fotos, die mit der jeweiligen Qualität und im gewählten Format aufgenommen werden können,
2 aktuell ausgewähltes Format,
3 aktuell ausgewählte Qualität.

Zoom: Sie können den Zoom mit den **Nach-oben/Nach-unten-Tasten** einstellen.

Hinweis: Falls der gewählte Zoom nicht dem jeweiligen Speicherformat entspricht, wird das Foto automatisch im entsprechenden Format gespeichert.

Wählen Sie [**Optionen**], um Folgendes auszuwählen: **Timer aktivieren/deaktivieren**, **Effekte**, **Belichtung**, **Selbstauslöser**, [**Hinweis:** Über diese Option können Sie bei aktiviertem Timer die Dauer einstellen], **Klickton**, **Bildqualität** sowie **Bildformat**. Wenn Sie die -Taste drücken, wird das Foto aufgenommen und im Display angezeigt, während es automatisch unter **Mein Telefon->Bilder** gespeichert wird. Wählen Sie danach [**Optionen**], um folgende Optionen anzuzeigen: **Nachricht senden, Senden/Bluetooth, Foto aufnehmen, Name ändern, Zu Kontakt hinz., Verwenden als, Eintrag löschen, Mein Telefon.**

Video aufnehmen

Wählen Sie das Menü **Kamera** und wählen Sie [**Optionen**]->**Video aktivieren**, um den Videomodus aufzurufen.

Wählen Sie bei Bedarf [**Optionen**] zur Auswahl einer der folgenden Optionen: **Videoton** oder **Videogröße**. Wählen Sie **Kamera aktivieren**, um zur Fotokamera zu wechseln.

Drücken Sie die -Taste, um mit der Aufnahme zu beginnen, und wählen Sie [**Anhalten**] zum Beenden der Aufzeichnung.

Hinweis: Bei Erreichen der maximal verfügbaren Größe stoppt das Telefon automatisch die Aufzeichnung. Wählen Sie [**Optionen**], um die verschiedenen Optionen anzuzeigen.

Hinweis: Die Videos werden auf dem Telefon im 3GP-Format gespeichert.

Organizer

Über dieses Menü können Sie auf eine Reihe von Zusatzfunktionen Ihres Telefons wie Wecker, Küchenwecker, Kalender, Aufgaben oder Rechner zugreifen.

Dienste

Dieses Element ist u. U. kein Bestandteil des Menüs Ihres Telefons, da sich dessen Verfügbarkeit nach der jeweiligen SIM-Karte richtet. Weitere Informationen erhalten Sie bei Ihrem Netzanbieter.

Wecker

Über dieses Menü können Sie den Alarm einstellen und aktivieren. Das Alarm-Symbol wird auf dem Standby-Bildschirm angezeigt. Der Alarm funktioniert selbst bei ausgeschaltetem Telefon.

Einheiten-Konverter

Über dieses Menü können Sie eine Vielzahl verschiedener Maßeinheiten umrechnen.

Browsen

POWERED BY OPENWAVE — ENHANCED BY OPENWAVE — RSA Data Security

Auf URL gehen: Zur Eingabe von URLs.

Bookmarks: Zum Speichern von Favoriten (Website-Adressen). In dieser Liste gespeicherte Favoriten können bearbeitet, gesendet oder gelöscht werden. Sie können ebenfalls Favoriten empfangen und dieser Liste hinzufügen.

Gespeicherte Seiten: Zur Offline-Anzeige auf dem Telefon gespeicherter Webseiten. (**Warnung:** Diese Seiten werden nicht aktualisiert).

Historie: Die im Verlauf der Navigation angezeigten Seiten werden in der Historie gespeichert.

Browser zurücksetzen: Zum Löschen von Lesezeichen, Cache, Cookies und Protokoll.

Einstellungen

Telefon

- **Profil**: Wählen Sie eine der folgenden Optionen: **Normal, Ruhemodus, Vibrieren und Ton, Vibrieren** oder **Flugmodus**.

Hinweis: Im **Flugmodus** können Sie nur die Telefonfunktionen nutzen, die keinen Netzwerkbetrieb erfordern.

- **Audio**: Wählen Sie **Melodie->Anrufe/SMS/MMS/Cell-Broadcast/Alarm**, um die Melodien für die unterschiedlichen Funktionen einzustellen. Zum Einstellen der Tastentöne wählen Sie **Tastentöne**. Wählen Sie **Netzton** oder **Akkuwarnton**, um die entsprechenden Warntöne bei niedrigem Akkuladestand oder schwachem Netzsignal einzustellen.
- **Motive**: Wählen Sie **Hintergrundbild**, um aus den Optionen **Nicht vorhanden, Tag-Nacht WP, Bildershow, Mein Telefon, Bereits geladen** einen Hintergrund auszuwählen.
  Wählen Sie **Bildschirmschoner**, um auf dem Standby-Bildschirm des Telefons eine Animation aus der vorhandenen Auswahl anzuzeigen.
  Wählen Sie **Energiesparmodus-> Beleuchtung**, um entweder **Nur Display** oder **Volle Beleucht.** einzustellen.
  Wählen Sie **Netz-Logo**, um das Logo Ihres Netzbetreibers auf dem Standby-Bildschirm anzuzeigen (modellabhängig).
- **Batteriestatus**: Zur Anzeige der verbleibenden Laufzeit bis zum nächsten Laden.
- **Datum & Uhrzeit**: Zum Einstellen von Datum und Uhrzeit auf dem Telefon.
  Wählen Sie **Autom. Einstellen,** um die manuelle oder automatische Aktualisierung von Datum und Zeit zu aktivieren (beispielsweise nach dem Einschalten des Telefons oder bei Reisen ins Ausland) (Dienst abhängig vom Netzbetreiber).
- **Sprachauswahl**: Zur Auswahl der Textsprache auf Ihrem Telefon. Bei Auswahl von **Automatisch** wird die zu verwendende Sprache in Abhängigkeit von Ihrer SIM-Karte festgelegt.
- **Direktzugriffe**: Zur Zuweisung von Funktionen zu den Richtungstasten (Navigationstaste).
- **Werkseinstellung**: Zurücksetzen der Telefoneinstellungen auf die Standardeinstellungen.
- **Kontakte**: Wählen Sie **Telefonbuch.,** um die auf der SIM-Karte, auf dem Telefon oder alle gespeicherten Kontakte anzuzeigen. Wählen Sie **Filterkriterien,** um festzulegen, wie die Kontakte geordnet werden sollen.
- **Hilfe anzeigen?**: Zur Aktivierung bzw. Deaktivierung der Hilfsanzeige auf dem Telefon.

Verbindungen

Sie können verschiedene Daten mit anderen Geräten (PC, Mobiltelefon, PDA, Drucker usw.), wie Abbildungen, Fotos, Audiodateien, Aufgaben, Kalender-Ereignisse oder Kontakte, austauschen. Der Datenaustausch kann über ein USB-Kabel oder eine Bluetooth-Verbindung vorgenommen werden.

- **Bluetooth**: Bluetooth ist eine Technologie, die zur Herstellung einer drahtlosen Verbindung mit anderen Bluetooth-fähigen Geräten zum Austausch von Daten verwendet wird, z. B. ein drahtloses Headset oder eine Freisprechanlage mit dem Telefon oder ein Telefon mit einem PC. Die Reichweite beträgt etwa 10 m.

WICHTIG:

1) Bei deaktivierter Bluetooth-Option erzielen Sie die beste Akkulaufzeit.
2) Zur Verbesserung der Sicherheit bei der Verwendung von Bluetooth sollte Ihr Telefon als unsichtbar für andere Geräte eingestellt werden.
3) Der Code des externen Geräts wurde u. U. bereits vom jeweiligen Hersteller vorgegeben. Entnehmen Sie in diesem Fall den Code dem Benutzerhandbuch des entsprechenden Geräts.

- **Netze**: Zur Festlegung der Netzeinstellungen.
- **Java**: Zur Festlegung verschiedener Parameter für das Herunterladen von Java-Anwendungen. Hiermit können Sie ebenfalls den für Java-Anwendungen verfügbaren Speicherplatz anzeigen.
- **Browser**: Zur Festlegung verschiedener, für WAP-Verbindungen erforderlicher Parameter.
- **USB-Modus**: Zur Auswahl des Modus für die Verbindung des Telefons mit einem PC unter Verwendung des als Zubehör erhältlichen USB-Kabels.

Hinweis: Bei einem eingehenden Anruf während des Datenaustauschs mit einem PC wird die Verbindung unterbrochen und muss manuell wiederhergestellt werden.

- **Synchronisieren**: Wählen Sie **Netzwerk (OTA)**, um Ihr Telefonbuch, Ihren Kalender oder Ihre Aufgaben mit den im Netzwerk Ihres Betreibers gespeicherten Archivdaten zu synchronisieren (je nach den vom Netzbetreiber angebotenen Optionen über eine GSM- oder GPRS-Verbindung mit Ihrem Telefon). Wählen Sie **Lokal**, um die Synchronisierung mithilfe der auf Ihrem Computer gespeicherten Archivdaten auszuführen.
- **Zubehör**: Zur Aktivierung oder Deaktivierung der Option zur automatischen Anrufbeantwortung, wenn das Telefon mit einem drahtlosen Headset oder einer Freisprecheinrichtung verbunden ist.

Speicher

Hier können Sie den für verschiedene Funktionen verwendeten Speicherplatz anzeigen.

Multimedia

- **Speicher:** Wählen Sie **Handy formatier.**, um im internen Speicher des Telefons abgelegte Multimedia-Objekte zu löschen.
- **Kamera**: Zur Einstellung der Kamerafunktionen Ihres Telefons, wie Selbstauslöser, Klickton, Bildformat sowie Bildqualität.
- **Video**: Zur Einstellung der Videofunktionen Ihres Telefons, wie Videoton und Videogröße.

Anrufe

Dieses Menü gestattet Ihnen die Verwaltung aller Anruffunktionen.

- **Rufnummeranzeige**: Zur Änderung des Status, wie Anonym, Eigene Rufnummer sowie Anrufernummer.
- **Schwarze Liste**: Zur Verringerung erfolgloser automatischer Anrufe. Waren bei einer bestimmten Nummer mehrere automatische Anrufversuche erfolglos (besetzt oder kein Anschluss), dann wird diese Nummer in der Schwarzen Liste abgelegt, und es werden unter dieser Nummer keine automatischen Anrufe mehr vorgenommen, bis Sie sie aus der Schwarzen Liste entfernt haben.

Hinweis: Diese Funktion gilt nicht für manuell vorgenommene Anrufe.

- **Mailbox**: Zum Speichern der Nummer für den Zugriff auf Ihre Mailbox.
- **Optionen**

Zähler: Zur Anzeige der Dauer der letzten Gespräche und der über GPRS ausgetauschten Datenmenge.

Anklopfen: (Dienst ist netzabhängig). Sie können die Anklopffunktion aktivieren, deaktivieren oder den Status des Dienstes überprüfen. Bei aktivierter Funktion wird auf dem Display eine Benachrichtigung angezeigt, wenn Sie während eines Gesprächs einen weiteren Anruf erhalten.

Umleitungen: Zur Weiterleitung eingehender Anrufe an eine andere Nummer oder die Mailbox.

Netz sperren: Zum Blockieren des Sendens oder Empfangens bestimmter Anrufe. Sie erhalten gemeinsam mit dem Abonnement von Ihrem Netzbetreiber ein entsprechendes Passwort. Die Verfügbarkeit dieses Dienstes ist abhängig von der Art Ihres Abonnements.

Nachrichten

Zum Einstellen der Sendeoptionen für SMS und MMS.

Sicherheit

- **PIN-Code**: Dies ist Ihr vertraulicher SIM-Code. Ist der Zugriff auf die SIM-Karte geschützt, wird auf dem Display die Aufforderung zur Eingabe des PIN-Codes angezeigt. Dabei handelt es sich um den vierstelligen Code, den Sie zusammen mit Ihrer SIM-Karte erhalten haben. Aus Sicherheitsgründen wird der Code nicht auf dem Display angezeigt.
  Nach Aktivierung oder Deaktivierung der PIN müssen Sie die richtige PIN eingeben.
- **PIN2-Code**: Sie verfügen zum Zugriff auf bestimmte Funktionen über einen zweiten PIN-Code. Die Verfügbarkeit dieser Funktionen ist abhängig von Ihrer SIM-Karte.
- **Telefoncode**: Nach Aktivierung des Telefoncodes kann Ihr Telefon ausschließlich mit Ihrer SIM-Karte verwendet werden. Das bedeutet, Sie werden bei jedem Wechsel der SIM-Karte nach dem Telefoncode gefragt. Der Standard-Telefoncode lautet 0000.
- **Netzsperrcode**: Zur Änderung der Netzsperreinstellungen. Die Verfügbarkeit dieses Dienstes ist abhängig von Ihrem Netzbetreiber und der Art Ihres Abonnements.
- **Kosten**: Zur Nutzung dieser Funktion ist der PIN2-Code erforderlich.
- **Optionen:** Wählen Sie **Vertraulichkeit->Anrufe/Mitteilungen/Kalender.** Diese drei Menüs dienen zur Aktivierung bzw. Deaktivierung des automatischen Löschens von ausgehenden Anrufen oder Kalender-Ereignissen nach dem Ausschalten. Wählen Sie zur Beschränkung ausgehender Anrufe **Vertraulichkeit->Festes Rufnr. Verz.** Die Verfügbarkeit dieses Menüs ist abhängig von Ihrer SIM-Karte und bedarf des PIN2-Codes.

Richtlinien für einen sicheren und effizienten Gebrauch

Lesen Sie diese einfachen Richtlinien sorgfältig durch. Die Nichtbeachtung dieser Richtlinien kann gefährlich oder gesetzeswidrig sein.

Sicherheitshinweis über die Einwirkung elektromagnetischer Energie im Radiofrequenzbereich

Informationen zur Einwirkung elektromagnetischer Felder und zur Spezifischen Absorptionsrate (SAR): Das Mobiltelefon LG-A140 entspricht den geltenden Sicherheitsbestimmungen hinsichtlich der Einwirkung elektromagnetischer Felder. Diese Bestimmungen basieren auf wissenschaftlichen Richtlinien, die auch Sicherheitsabstände definieren, um eine gesundheitliche Gefährdung von Personen (unabhängig von Alter und allgemeinem Gesundheitszustand) auszuschließen.

- In den Richtlinien hinsichtlich der Einwirkung elektromagnetischer Felder wird eine Maßeinheit verwendet, die als Spezifische Absorptionsrate bzw. SAR bezeichnet wird. Der SAR-Wert wird mit standardisierten Testmethoden ermittelt, bei denen das Telefon in allen getesteten Frequenzbändern mit der höchsten zulässigen Sendeleistung betrieben wird.

Auch wenn Unterschiede zwischen den SAR-Werten verschiedener LG-Telefonmodelle bestehen, entsprechen sie in jedem Fall den geltenden Richtlinien hinsichtlich der Einwirkung elektromagnetischer Felder.

- Der von der Internationalen Kommission für den Schutz vor nichtionisierenden Strahlen (International Commission on Non-Ionizing Radiation Protection, ICNIRP) empfohlene SAR-Grenzwert liegt bei 2 W/kg gemittelt über zehn (10) Gramm Gewebe.
- Der höchste, für dieses Telefonmodell mit DASY4 ermittelte SAR-Wert bei Verwendung am Ohr liegt bei 1.08 W/kg (10 g) bzw. 0.748 W/kg (10 g), wenn das Gerät am Körper getragen wird.
- Einige Länder/Regionen haben den vom Institute of Electrical and Electronics Engineers (IEEE) empfohlenen SAR-Grenzwert übernommen. Dieser liegt bei 1.6 W/kg gemittelt über ein (1) Gramm Gewebe.

Pflege und Wartung des Telefons

WARNUNG

Verwenden Sie ausschließlich Akkus, Ladegeräte und Zubehörteile, die für die Verwendung mit diesem Mobiltelefon zugelassen sind. Die Verwendung anderer Teile kann zum Erlöschen der Zulassungen oder Garantien für dieses Mobiltelefon führen und kann gefährlich sein.

- Öffnen Sie dieses Mobiltelefon nicht. Sollten Reparaturen erforderlich sein, wenden Sie sich an einen qualifizierten Kundendienstmitarbeiter.
- Bewahren Sie dieses Mobiltelefon nicht in der Nähe elektrischer Geräte auf (z.B. Fernsehgeräte, Radios, PCs).
- Halten Sie das Telefon von Wärmequellen wie Heizungen oder Herdplatten fern.
- Lassen Sie das Telefon nicht fallen.
- Setzen Sie das Telefon keinen starken Erschütterungen oder Stößen aus.
- Schalten Sie das Telefon aus, wenn dies aufgrund von jeweils geltenden Bestimmungen erforderlich ist. Verwenden Sie Ihr Telefon beispielsweise nicht in Krankenhäusern, da andernfalls die Funktionalität empfindlicher medizinischer Geräte beeinträchtigt werden kann.
- Fassen Sie das Telefon während des Ladevorgangs nicht mit nassen Händen an. Dadurch kann es zu einem elektrischen Schock oder einer schweren Beschädigung des Telefons kommen.
- Laden Sie das Telefon nicht in der Nähe entflammbaren Materials, da das Telefon heiß werden kann und somit eine Brandgefahr darstellt.
- Reinigen Sie das Gerät außen mit einem trockenen Tuch (verwenden Sie keine Lösungsmittel wie Benzin, Verdünner oder Alkohol).
- Legen Sie das Telefon beim Aufladen nicht auf Polstermöbel.
- Das Telefon sollte in einer gut belüfteten Umgebung aufgeladen werden.
- Bewahren Sie das Telefon nicht in sehr verrauchten oder staubigen Umgebungen auf.
- Bewahren Sie das Telefon nicht in der Nähe von Gegenständen mit Magnetstreifen (Kreditkarten, Flugscheine usw.) auf, da andernfalls die auf dem Magnetstreifen gespeicherten Informationen beschädigt werden könnten.
- Berühren Sie das Display nicht mit spitzen oder scharfen Gegenständen; and

LG

LG-A140 User Guide -ENGLISH-

CE 0168

Some of the contents in this manual may differ from your phone depending on the software of the phone or your service provider.

Disposal of your old appliance

1 When this crossed-out wheeled bin symbol is attached to a product it means the product is covered by the European Directive 2002/96/EC.

2 All electrical and electronic products should be disposed of separately from the municipal waste stream via designated collection facilities appointed by the government or the local authorities.

3 The correct disposal of your old appliance will help prevent potential negative consequences for the environment and human health.

4 For more detailed information about disposal of your old appliance, please contact your local authority, waste disposal service or the shop where you purchased the product.

Getting to know your phone

Earpiece
Display screen
Soft keys
Each of these keys performs the functions indicated by the text on the display immediately above them.
Send key
You can dial a phone number and answer incoming calls.
OK key+4-way navigation key
Use for quick access to phone functions.
End/Power key
Allows you to power the phone on or off, end calls, or return to Standby Mode.
Clear Key
Deletes a character with each press. Use this key to go back to the previous screen.
Alphanumeric keys
These keys are used to dial a number in Standby Mode and to enter numbers or characters in edit mode.

Selecting fuctions and options

Your phone offers a set of functions that allows you to use the phone for your needs. These functions are arranged in menus and sub-menus, accessed via the OK key and two soft keys. Each menu and sub-menu allows you to view and use a particular function.

The roles of the soft keys vary according to the current context; the option on the bottom line of the display just above each key indicates its current role.

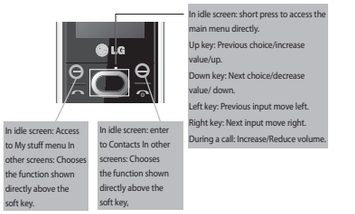
In idle screen: short press to access the main menu directly.
Up key: Previous choice/increase value/up.
Down key: Next choice/decrease value/ down.
Left key: Previous input move left.
Right key: Next input move right.
During a call: Increase/Reduce volume.
In idle screen: Access to My stuff menu In other screens: Chooses the function shown directly above the soft key.
In idle screen: enter to Contacts In other screens: Chooses the function shown directly above the soft key.

Installing the SIM Card and Charging the Battery

Installing the SIM Card

When you subscribe to a cellular network, you are provided with a plug-in SIM card loaded with your subscription details, such as your PIN, any optional services available.

Important! : The plug-in SIM card and its contacts can be easily damaged by scratches or bending, so be careful when handling, inserting or removing the card. Keep all SIM cards out of the reach of small children.

Illustrations

1 Open battery cover
2 Remove the battery
3 Insert your SIM
4 Install the battery
5 Close the battery cover
6 Charge your battery

WARNING: Do not remove the battery when the phone is switched on, as this may damage the phone.

Using your phone

Switching on

Press and hold the key to switch your phone on. A short display appears.

If access to the SIM card is protected, the phone prompts you to enter the PIN number: between 4 and 8 digits given to you when the SIM card was issued. These digits do not appear on the screen for security reasons.

WARNING : When a wrong PIN number is entered three times consecutively, SIM card will be blocked.
To unblock it:
Enter the PUK (Personal Unblocking Key) code provided by your operator, and accept.Enter a new PIN number and accept.Enter your new PIN number again and validate. After 5 or 10 failed attempts (depending on the type of SIM card), the SIM card is de´nitely locked. You must then contact your operator to obtain a new card.

Once the network name appears on the screen, the phone is ready to make a first call.

Making a call

Dial the number and press the key.

During the call, the tones may indicate the establishment of the call. Once communication has been established, press the navigation Up/Down keys to adjust the volume. At the end of the conversation press the key to hang up.

International call
Long press key to display "+", then dial the country code without waiting for the dial tone, then the area code and the number of the called party.
Emergency services
To obtain the international emergency service, dial 112 then press the key. Depending on the operators you can obtain the emergency service with or without SIM card, or when the keypad is locked.

Call history

This menu allows you to access the list of last numbers used. Enter Call history menu, you can access the call log divided into four lists that you can display with the navigation keys: All calls, Missed calls, Dialled Calls, Received Calls as well as Call Manager. Each call has information on type of call, date, time and duration. Select a call from the list and validate, and various options are proposed. You can also make a call to a number by pressing the key.

Fast access to the list of calls from the idle screen: press the key.

Receiving a call

When you receive a call, a melody (defined in the menu **Settings->Phone->Sounds->Ringtone->Calls**) notifies you and the caller number appears on the screen if the service is offered by your provider. Press the key or the key to answer, and speak. To refuse the call, press the key.

Hands-free mode
To change to hands-free mode during a call:
make a short press on the key and confirm, or press the key and select Speakerphone on, then press the key or the key to confirm activation of the amplified mode.
WARNING: in this mode do not bring the phone up to your ear.

All the numbers corresponding to incoming and outgoing calls are logged in the list of recent calls.
When on a call, pressing the key allows you to have access to different functions.
Press [Mute on] to switch off the microphone temporarily when you wish to mute your audio.

Switching off

Press the key for five (5) seconds.
The shut down message is displayed. The phone switches off.

Messaging

From this menu, you can send an SMS and MMS.
Please contact operator to get more information on cost.

Creating a message

Select **Messaging->New message->Message**.

Change input mode

1 To deactivate T9 mode press and hold the key, the ABC mode then applies.
2 As in T9 mode, change to capital letter, small letter or 123 (digit) mode at any time by pressing and releasing the key.
3 You may also obtain the digits by pressing and holding the key you want.
4 Changing the language in T9 mode: press and hold the key.
5 Change mode by pressing [**Options**]->**Input mode**.
6 Punctuation characters are obtained by pressing the key (except in 123 mode), or with the help of Insert mode (fast access by briefly pressing).

Saving the message

Exiting the edit directly, the edited message is saved in the drafts automatically, and it will display when you enter next time. Select **Save as->Draft**, it is saved in the **Drafts** menu.
Select **Save as->Template** to use it again as a template, it is saved in the **Templates** menu.

Sending the message

Once the text is entered, press the navigator or press [**Options**]->**Send to**. Enter the recipient's number or press [**Options**]->**Contacts** to select a contacts list from your phonebook.

Receiving messages

When you receive a message, the phone plays the ring tone, and a message icon is displayed on the screen. When the icon is flashing, the memory is full and no further messages will be received. Receiving multimedia objects can take several seconds. An icon is flashing when the download of your message is in progress.
Note that you have two different possibilities for receiving MMS: automatically or manually. For more details on cost when receiving MMS abroad please contact your network operator.

Message menu

- **Inbox**: The Inbox menu is used to store all your received messages, including read and unread messages. Messages are listed in chronological order, the latest one being displayed first.
- **Drafts:** When you store a composed message, it is stored in the drafts.
- **Outbox**: This menu displays the messages that have not been sent. You can therefore send them again.
- **Sent**: This menu is used to store all your sent messages if you have activated the Store sent msgs option in the Messaging Settings menu.

Call Voice Mail

This function allows you to call your voicemail by long pressing .
Note: The voicemail number is entered in the menu **Settings ->Call history->Set Voicemail**.

Templates

When composing a message, if you selected the **Save as -> Template** option, the template is saved in this menu.

Local information

This menu is used to activate reception of local information broadcast by the network. You can choose whether to receive or not (please contact your operator for details).

Memory status

Select **Advanced->Memory status**
This menus allows you to see how much memory space is available for saving messages.

Messaging Settings

Select **Advanced->Settings** to set:
- **SMS**: The SMS settings are: Save sent messages, Acknowledgment, Validity period, Message type, Message centre number.
- **MMS**: The MMS settings are:

Save sent messages: it is highly recommended that you keep this function deactivated, to avoid saturating the memory.
Retrieval mode: This menu allows you to define how MMS messages are downloaded. For cost control it is recommended to set retrieval mode to Manual for Roaming.
Priority: selection of a priority to send a message.
Delivery report: request a delivery report when sending a message.
Validity period: during that period, the network provider will try to forward the message.
Advanced settings: to activate/deactivate the **Send delivery report, MMS ignore, Display Bcc, Sender visibility** as well as **Maximal Size**. Select MMS server to select another MMS provider, or set the parameters of a new MMS provider.

Contacts

Using the contacts

Entering the Contacts menu, the contacts list is displayed if you already have some (otherwise, go to **Storing a new contact**).
When a contact is selected, the name, the number and the associated picture are displayed. After pressing the key or the key, various options are proposed.
You can search for a contact quickly by typing the first letters (up to three).

Storing a new contact

There are two ways to store a contact:
1) By selecting Contacts->[Options]->Add phone contact or Add SIM contact.
2) Contacts->New contact->Phone, SIM card or Fixed directory (This menu restricts the outgoing calls. The availability of this menu depends on your SIM.).
- Then enter the name and press key.
- Enter the number and press key.
- Press [Save] to store it.

Calling a contact

Select a contact, press the key to start the call. If several numbers are stored, select at first, then to call.
Select a contact, press the key to display their numbers, press [**Options**]-> **Call** to start the call.
From the idle screen, use the alphanumeric keypad keys to enter the first several letters of name that you want to find in the phonebook, the name of contacts are displayed on the idle screen, select the correct contact to call.

Send contact

From the **Contacts** menu, select **Send by message** or **Send via Bluetooth** to send the chosen contact by message or Bluetooth.

Copy / Delete contact

From the Contacts menu, select **Copy to mobile** to select the current contact, several contacts or all the SIM contacts to copy, select **Copy to SIM** to select the current contact and modify the name and number if necessary to copy.
Contacts Select **Delete** to delete the contact selected, several contacts or all the contacts.

Export contacts

It allows you to copy one or several contacts details to the **My stuff->My contacts** directory.

Set as my card/Business card

The details of a contact stored in the phone memory can be saved as a business card. Then you can read it, modify it or sent it by message or Bluetooth.

Mailing list

A mailing list allows you to group contacts. This list can be used to send message easily to all the list contacts (only contacts stored in the phone memory).

Smart Dialing

Your phone has a smart dialing function. From Idle screen, press some keys, it will show you menu to access.
For example, on the Idle screen, input '22' and then you can see and access quickly to below menus.
Camera
Calendar
Calculator
Battery status

Games & apps

Games

Each game has a tutorial section to guide you through the rules and actions. And when you've completed these games, why not download some more?
- **Download Games:** The JavaTM function allows you to download games and utilities in your phone.
Downloading is done through the browsing function. Note that additional cost may occur.

Applicatons

This menu contains your downloads (applets). Press key to run applets.

My stuff

The menu contains the directories of all the multimedia objects recorded in your phone and the downloaded objects (pictures, ringtones etc.).

Camera

Taking and saving a photo

Select the **Camera** menu.
The three text lines on the left of the screen indicate:
1 the number of photos that you can take with the photo and the format quality selected,
2 the current format selected,
3 the current quality selected.
Zoom: To adjust zoom by pressing the **Up/Down keys**.
Note: If the zoom selected does not match the storage format, the photo is automatically saved in an appropriate format.
Press [**Options**] to select: **Self timer/Deactivate timer, Effects, Exposure, Timer duration** (**Note:** this options only displays when the Self timer is activated), Shutter sound, Quality as well as Photo format.
Pressing key, the photo is taken and stays on the phone display while the photo is saved automatically in **My stuff->Images**. Then press [**Options**] to display the following options: **Send by Bluetooth, New..., Rename, Add to contact, Use as, Delete**.

Recording a video

Select the **Camera** menu, press the key directly or select [**Options**]->**Go to video** to video mode.
If necessary, press [Options] to select the following options: **Video sound, Size restriction** etc. Select **Go to Camera** to take a photo.
Press key to start record then press [**Stop**] to stop recording.
Note: the phone automatically stops recording when the maximum size available is reached. Press [**Options**] to display the different options.
Note: the videos are saved in the phone in .3gp format.

Organiser

This menu allows you to access the various extra features offered by your phone, such as Alarm, Timer, Calendar, ToDo, Calculator etc.

Services

This item may not be present on your phone's menu, as its contents depends on your SIM. Please check with your operator for details

Alarm

This menu allows you to set and activate the alarm. The alarm icon appears on the idle screen. The alarm works even when the phone is switched off.

Unit Converter

This menu allows you to convert many types of measurement units.

Browsing

Enter address: Allows to enter URL addresses.
Bookmarks: Allows to store bookmarks (addresses of Internet sites). A bookmark stored in the list can be modified, sent or deleted. You can receive bookmarks and add them to this list.
Saved pages: Allows to display off-line Internet pages saved on the phone. (**Warning**: these pages will not be updated).
History: Backward and forward navigation of the pages displayed are kept in memory.
Browser Reset: To clear the details of bookmarks, cache, cookies as well as history.

Settings

Phone

- **Profile**: To select the profile: **Normal, Silent, Outdoor, Meeting mode** as well as **Flight Mode**.

Note: **Flight mode** allows you to use only certain phone functions, which do not require the use of the network.
- **Sounds**: Select **Ringtone->Calls/SMS/MMS/Local Info/Alarm** to customize the ringtones for different functions. Select **Key** tone to set the keypad beeps.
Select **Network beeps** or **Battery beeps** to activate a beep for network or low battery level.
- **Display**: Select **Wallpaper** to select a wallpaper from **None, DayNight WP, Random, My Stuff, Preloaded**.
Select **Screensavers** to display an animation from the choices when the phone is in standby mode.
Select **Energy saving**-> **Backlight** to set either **Screen only** or **Full backlight**.
Select **Operator logo** to display your operator's logo on the idle screen (depending on model).
- **Battery status**: To display the battery's expected time before next charge.
- **Date / Time**: To set the date and time of your phone.
Select **Automatic update** to choose manual or automatic updating of date and time (after switching on your phone or when going abroad for instance) (service depending on the operator).
- **Language**: To choose your phone's display language. If you select **Automatic**, the language used will be the one determined by your SIM card.
- **Shortcuts**: To allocate functions to the directional keys of the navigator.
- **Master reset**: Reset the phone settings to the default.
- **Contacts**: Select **Contact** lists to display the phonebook only saved in SIM, saved on Phone or display all. Select **Sorting** to select the way to sort contacts.
- **Help activation**: To activate or deactivate the display of the help in the phone.

Connectivity

You can exchange various data with other devices (PC, mobile phones, personal assistants, printers, etc.): images, sounds, photos, ToDo tasks, organiser events, contacts, etc. Data exchange can be done through a USB cable or a Bluetooth connection.
- **Bluetooth**: Bluetooth is a technology used to establish a wireless connection with other Bluetooth equipped devices: for example, with a wireless head-set or a car kit to phone, or with a PC to exchange data. The range is about 10 m.

IMPORTANT:
1) The Off option ensures the best battery life for your phone.
2) Bluetooth security is better guarded when your phone remains invisible to the other devices.
3) The code of the remote device may be predefined by the device manufacturer. In this case, refer to the user manual of this device to find out this code.
- **Network**: To configure network preferences.
- **Java**: To set various parameters to download Java applications. It also allows you to display the memory available for Java application.
- **Browser**: To set various parameters needed for WAP connections.
- USB Mode: To select a mode to connect the phone to a PC with a USB cable available as an accessory.

Note: If a call comes in during an exchange of data with your PC, the link will be interrupted and will have to be manually re-started.
- **Synchronisation**: Select Network (OTA) to synchronize your phonebook, your organizer or your ToDos with your archives stored in your operator's network depending on the options offered by your operator with a GSM or GPRS connection from your phone.
Select Local to synchronize with your archives stored in your computer.
- **Accessories**: To activate or deactivate the Automatic response option when the phone is connected to a wireless head-set or a car kit.

Memory status

This menu displays the memory space used for the various functions.

Multimedia

- Storage: Select Format mobile to delete multimedia objects stored in the internal memory of the phone.
- **Camera**: To set the camera features of your phone, such as Timer duration, Click sound, Photo format as well as Photo quality.
- **Video**: To set the video features of your phone, such as Video sound and Video size restriction.

Call history

This menu allows you to manage all the calls functions.
- **Show my number**: To modify the status, including Anonyms mode, My number as well as Caller's number.
- **Blacklist**: To limit failures on automatic calls. When several automatic calls have failed with a number (number busy or unknown), this number is put in the blacklist and no further automatic call will be made with this number until you delete it from the blacklist.

Note: This function does not apply to the calls performed manually.
- **Set Voicemail**: Used to store your voicemail access number.
- **Advanced**

Counter: To see the duration of the last calls, and to check the volume of data exchanged in GPRS.

Call waiting: (Network dependent service). You can activate, deactivate or check the Status of the call waiting service. If active, during a call, if a second caller tries to contact you, the screen displays the call notification.
Call forward: Select to forward incoming calls to a different number or to the voicemail.
Call barring: To block the sending or receiving of certain calls. A password will be provided by operator together with your subscription. Access to this service depends on your subscription type.

Messaging

To set SMS or MMS sending options and to enter the voicemail number.

Security

- **PIN code**: This is your SIM's secret code. If access to the SIM card is protected, the phone prompts you to enter the PIN number: between 4 and 8 digits given to you when the SIM card was issued. These digits do not appear on the screen for security reasons. After activate or deactivate the PIN, you must input the correct PIN.
- **PIN2 code**: You have a second PIN number to allow you to access certain functions. These functions may or may not be available depending on your SIM card.
- **Phone code**: When the Phone code is activated, it prevents anybody to use your phone with another SIM card than yours. Practically, you will be prompted for the phone code anytime you change the SIM card. Default phone code is 0000.
- **Operator:** It allows you to modify the call barring. Access to this service depends on depends on your network operator and type of subscription.
- **Cost:** This function needs PIN2 code support.
- **Advanced**: Select **Confidentiality->Calls/Messages/ Organizer.** These three menus allow the activation or deactivation of automatic deletion, after power off/on, of outgoing calls or organizer events. Select **Condentiality->Fixed dialing** to restrict the outgoing calls. The availability of this menu depends on your SIM, and it needs PIN2 number support.

Guidelines for safe and efficient use

Please read these simple guidelines. Not following these guidelines may be dangerous or illegal.

Exposure to radio frequency energy

Radio wave exposure and Specific Absorption Rate (SAR) information This mobile phone model LG-A140 has been designed to comply with applicable safety requirements for exposure to radio waves. These requirements are based on scientific guidelines that include safety margins designed to assure the safety of all persons, regardless of age and health.
- The radio wave exposure guidelines employ a unit of measurement known as the Specific Absorption Rate, or SAR. Tests for SAR are conducted using standardised methods with the phone transmitting at its highest certified power level in all used frequency bands.

While there may be differences between the SAR levels of various LG phone models, they are all designed to meet the relevant guidelines for exposure to radio waves.
- The SAR limit recommended by the International Commission on Non-Ionizing Radiation Protection (ICNIRP) is 2W/kg averaged over 10g of tissue.
- The highest SAR value for this model phone tested by DASY4 for use at the ear is 1.08 W/kg (10g) and when worn on the body is 0.748 W/Kg(10g).
- SAR data information for residents in countries/regions that have adopted the SAR limit recommended by the Institute of Electrical and Electronics Engineers (IEEE), which is 1.6 W/kg averaged over 1g of tissue.

Product care and maintenance

⚠ WARNING
Only use batteries, chargers and accessories approved for use with this particular phone model. The use of any other types may invalidate any approval or warranty applying to the phone, and maybe dangerous.
- Do not disassemble this unit. Take it to a qualified service technician when repair work is required.
- Keep away from electrical appliances such as TVs, radios, and personal computers.
- The unit should be kept away from heat sources such as radiators or cookers.
- Do not drop.
- Do not subject this unit to mechanical vibration or shock.
- Switch off the phone in any area where you are required by special regulations. For example, do not use your phone in hospitals as it may affect sensitive medical equipment.
- Do not handle the phone with wet hands while it is being charged. It may cause an electric shock and can seriously damage your phone.
- Do not to charge a handset near flammable material as the handset can become hot and create a fire hazard.
- Use a dry cloth to clean the exterior of the unit (do not use solvents such as benzene, thinner or alcohol).
- Do not charge the phone when it is on soft furnishings.
- The phone should be charged in a well ventilated area.
- Do not subject this unit to excessive smoke or dust.
- Do not keep the phone next to credit cards or transport tickets; it can affect the information on the magnetic strips.
- Do not tap the screen with a sharp object as it may damage the phone.
- Do not expose the phone to liquid or moisture.
- Use the accessories like earphones cautiously. Do not touch the antenna unnecessarily.

Efficient phone operation

Electronics devices

All mobile phones may get interference, which could affect performance.
- Do not use your mobile phone near medical equipment without requesting permission. Avoid placing the phone over pacemakers, for example, in your breast pocket.
- Some hearing aids might be disturbed by mobile phones.
- Minor interference may affect TVs, radios, PCs, etc.

Road safety

Check the laws and regulations on the use of mobile phones in the area when you drive.
- Do not use a hand-held phone while driving.
- Give full attention to driving.
- Use a hands-free kit, if available.
- Pull off the road and park before making or answering a call if driving conditions so require.
- RF energy may affect some electronic systems in your vehicle such as car stereos and safety equipment.
- When your vehicle is equipped with an air bag, do not obstruct with installed or portable wireless equipment. It can cause the air bag to fail or cause serious injury due to improper performance.
- If you are listening to music whilst out and about, please ensure that the volume is at a reasonable level so that you are aware of your surroundings. This is particularly imperative when near roads.

Avoid damage to your hearing

Damage to your hearing can occur if you are exposed to loud sound for long periods of time. We therefore recommend that you do not turn on or off the handset close to your ear. We also recommend that music and call volumes are set to a reasonable level.

NOTE! Excessive sound pressure from earphones can cause hearing loss.

Blasting area

Do not use the phone where blasting is in progress. Observe restrictions, and follow any regulations or rules.

Potentially explosive atmospheres

- Do not use the phone at a refueling point.
- Do not use near fuel or chemicals.
- Do not transport or store flammable gas, liquid, or explosives in the same compartment of your vehicle as your mobile phone and accessories.

In aircraft

Wireless devices can cause interference in aircraft.
- Turn your mobile phone off before boarding any aircraft.
- Do not use it on the ground without permission from the crew.

Children

Keep the phone in a safe place out of the reach of small children. It includes small parts which may cause a choking hazard if detached.

Emergency calls

Emergency calls may not be available under all mobile networks. Therefore, you should never depend solely on the phone for emergency calls. Check with your local service provider.

Battery information and care

- You do not need to completely discharge the battery before recharging. Unlike other battery systems, there is no memory effect that could compromise the battery's performance.
- Use only LG batteries and chargers. LG chargers are designed to maximize the battery life.
- Do not disassemble or short-circuit the battery pack.
- Keep the metal contacts of the batterypack clean.
- Replace the battery when it no longer provides acceptable performance. The battery pack maybe recharged hundreds of times until it needs replacing.
- Recharge the battery if it has not been used for a long time to maximize usability.
- Do not expose the battery charger to direct sunlight or use it in high humidity, such as in the bathroom.
- Do not leave the battery in hot or cold places, this may deteriorate the battery performance.
- There is risk of explosion if the battery is replaced by an incorrect type.
- Dispose of used batteries according to the manufacturer's instructions. Please recycle when possible. Do not dispose as household waste.
- If you need to replace the battery, take it to the nearest authorized LG Electronics service point or dealer for assistance.
- Always unplug the charger from the wall socket after the phone is fully charged to save unnecessary power consumption of the charger.

Accessories

There are various accessories for your mobile phone. You can select these options according to your personal communication requirements.

Charger

Stereo headset

NOTE:
Always use genuine LG accessories.
Failure to do this may invalidate your warranty.
Accessories may vary in different regions.

Ambient Temperatures

Max : +55°C (discharging)
+45°C (charging)
Min : -10°C

Bluetooth QD ID B016601

Declaration of Conformity

LG Electronics

Suppliers Details

Name
LG Electronics Inc.

Address
LG Electronics Inc. 4-12, Sam Tower, 20,
Yeoui-do-dong, Yeongdeungpo-gu, Seoul, Korea 150-721

Product Details

Product Name
GSM 900 / DCS 1800 Dual Band Terminal Equipment

Model Name
LG-A140, Victoria

Trade Name
LG

CE 0168

Applicable Standards Details

R&TTE Directive 1999/5/EC
EN 301 489-01 V1.6.1, EN 301 489-07 V1.3.1, EN 301 489-17 V2.1.1
EN 301 511 V9.0.2
EN 60950-1:2006 / A11:2009 + A1:2010
EN 50360 : 2006
EN 300 328 V1.7.1

Supplementary Information

The conformity to above standards is verified by the following Notified Body(BABT)

BABT, Forsyth House, Churchfield Road, Walton-on-Thames, Surrey, KT12 2TD, United Kingdom
Notified Body Identification Number : 0168

Declaration

I hereby declare under our sole responsibility that the product mentioned above meets the declaration dictate complies with the above mentioned standards and Directives.

Name: Jeanet Cate
Date Typing, Jan / Director: August 25 2010

LG Electronics Logistics and Services B.V.
Weluwemeer 15, 1327 AE Almere, The Netherlands

Signature of representative